

ELOCK T1102EM Touch Access Control System

User Manual

Date : 29-Nov-2019

1) Change Access Setting

- a) * 999999 # 3 0 # * (Card Only)
- b) * 999999 # 3 1 # * (Card + Pin)
- c) * 999999 # 3 2 # * (Card or Pin) **Default**

2) Add New Card

- a) * 999999 # 1 Read Card # *

3) Delete Card

- a) * 999999 # 2 Read Card # *

4) Add User PIN Code

- a) * 999999 # 1 User ID Number # PIN # *
1~10 XXXX

5) Change User PIN Code

- a) * User ID Number # OLD PIN # NEW PIN # NEW PIN #
1~10 XXXX XXXX XXXX

6) Electric Lock Time Setting

- a) * 999999 # 4 0 ~ 99 # * **Default is 5 Secs**

7) Door Open Detection

- a) * 999999 # 6 0 # * **Disable (Default)**
- b) * 999999 # 6 1 # * **Enable**

Buzzer will sound after door open exceed 1 minute

8) Change Master Code

- a) * 999999 # 0 NEW CODE # NEW CODE # *
Master code can be 6 to 8 digits long

9) Reset to Factory Mode

- a) Power ON, press # and release quickly when LED turns orange
- b) On hearing two "Di Di" sound, system is back to factory settings
- Pls note only installer data is restored, user data will not be affected**

Wiring Diagram :

