

Air-Conditioner Remote Control

Model Setting of Remote Control

1. Pull side cover of remote control down, Put 2 AAA batteries as per polar indicated on battery cabin.
2. Find the model code from Model Code List. If there are many models for one brand, you have to try the one which is most suitable for your machine. E.g., for SANYO, you should try model code from 035 to 039.
3. Press the set key with sharp stick like a pencil (You may not press the key at the time of loading batteries.). Model code on LCD will flash, Press model code "+" or "-" key until required model code appears. Then press ENTER key, the model code stops flashing. Aim at air conditioner by pressing ON/OFF key, you can remote control your air conditioner.

Remote Control Auto Search

If you do not know model of air conditioner and remote control or you cannot find required model from Model Code List, please operate as per the following steps:

1. Press the set key with sharp stick like a pencil, model code on LCD will flash, Let the remote control aim at air conditioner. Press AUTO search key. Press it once, model code adds 1 automatically and emit corresponding ON/OFF signal. Press and release until air conditioner receives signal and produces buzzer sound. Then press ENTER key.
2. After turning on the air conditioner, try other function keys. If they do not work, repeat above steps until it is correct.

Model Code Table

Brand	Model Code	Brand	Model Code	Brand	Model Code
CARRIER	163, 164, 165, 166, 167	HUALING	195, 196, 197	PHILCO	146, 147
CHANGHONG	200, 201, 202, 203, 204, 205	HUIFENG	120	SAMSUNG	106, 107, 108, 109
CHIGAO	207, 208	HUIKANG	096	SANYO NEC	035, 036, 037, 038, 039, 040, 041, 042, 043, 044, 045, 046, 047, 048, 049, 050, 051, 052, 053, 054, 055, 056, 057, 058, 059
CHOFU	121, 122, 123, 124	JDC	181		
CONROWA	198	JOHSON	135	SAJO DENKI	176, 177, 178, 179, 180
CORONA	097, 098, 099, 100, 101, 102, 103	KANGLI	144, 145	SHANGLING	199
DAIKIN	110, 111, 112, 113, 114, 115	KELON	157, 158	SHARP	068, 069, 070, 071, 072, 073, 074, 075
DOCTOR	162	KLIMATAIR	155, 156		
ELECTRA	174, 175	KONKA	188	SHENGFENG SHUANGLU	154
Electrolux	148, 149, 150	LG	116, 117, 118, 119	SHUANGLU	206
FUJITSU	088, 089, 090, 091, 092, 093, 094, 095	MACQUAY	128, 129, 130, 131, 132, 133, 134	SOVA	186, 187
GALANZ	142, 143	MIDEA	189, 190	TCL	125, 126, 127
GOLDSTAR	136	MITSUBISHI ELECTRIC	025, 026, 027, 028, 029, 030, 031, 032, 033, 034	TOSHIBA	076, 077, 078, 079, 080, 081, 082
GREE	172, 173	MITSUBISHI INDUSTRY	001, 002, 003, 004, 005, 006, 007, 008, 009, 010, 011, 012, 013, 014, 015, 016, 017, 018, 019, 020, 021, 022, 023, 024	TRANE	168, 169, 170
GUQIAO	161			UNI-AIR	159, 160
HAIER	191, 192, 193, 194	NATIONAL PANASONIC	060, 061, 062, 063, 064, 065, 066, 067	WEILI	171
HITACHI	083, 084, 085, 086, 087			WHIRLPOOL	137, 138, 139, 140, 141
HISENSE	104, 105			YORK	182, 183, 184, 185
HUABAO	151, 152, 153				

Attention

1. If it is not used for a long time, remove the battery so as to avoid leakage liquid of the battery to damage the machine. When the LCD looks dim, please change batteries (New and old batteries can not be used together). After the batteries are replaced every time, it is necessary to set model code again.
2. If abnormal situation appears because of not correct use, please put pen tip or other thin item into "Reset" hole. Press it to restore normal status. This time it is necessary to set model code again.
3. The manufacturer keeps the right to change the parameter and function of the product.

Technical Parameters

Controllable distance : Large than 8 meters

Power supply voltage: DC 3 V

Battery model: Battery AAA(UM-4, R03)×2

Dimension: L160mm×W58mm×D18mm

Weight: Approx.95g(excl.the batteries)